

WALLMEK i Kungälv AB – Special tools for auto repairs

www.wallmek.se • info@wallmek.se • Tel. +46(0)303 58580 • Bultgatan 18 442 40 Kungälv, Sweden

Manual för Iveco hjullager/nav-avdragare nr 1091-27

1. Montera verktyget direkt på navet som på bilden nedan. Använd originalbultarna för bromsskivan.
2. Justera hydraulcylinderns tryckaxel mot axeltappen.
3. Om axeltappen inte lossnar ifrån hjullagret vid fullt tryck så är det möjligt att slå med en hammare (använd alltid slagkropp 1086-6 som på bilden) i cylinderns tryckriktning.
4. Rengör från rost och montera det nya lagret på axeltappen.



Slagkropp 1086-6



Originalbultar för bromsskivan, 3 st.




Manual for Iveco wheel hub/bearing puller no. 1091-27

1. Mount the tool directly on the hub as in the picture. Use the original bolts for the brake disc.
2. Adjust the inner press axle towards the axle shaft and start pressing.
3. If the wheel bearing doesn't separate from the axle shaft when using full pressure it's possible to punch with a hammer (always use a punching socket as in the picture) in the cylinder's pressing direction.
4. Clean from rust and assemble the new wheel bearing on the axle



Punching socket 1086-6

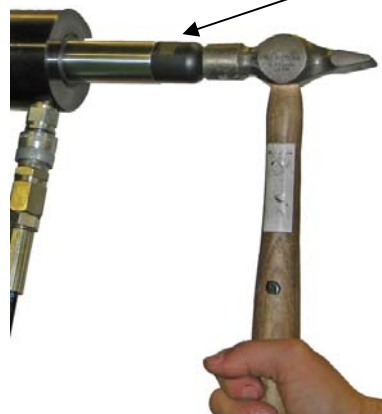

Original bolts for the brake disc, 3 pc.

